




Liquid Sanitizer

Low Temperature Dish Machine Sanitizer | Bajo Plato Temperatura Machine Sanitizer

These colors indicate approximate strength of the solution in parts per million (PPM) available chlorine.

TIME OF TEST - 1 SECOND

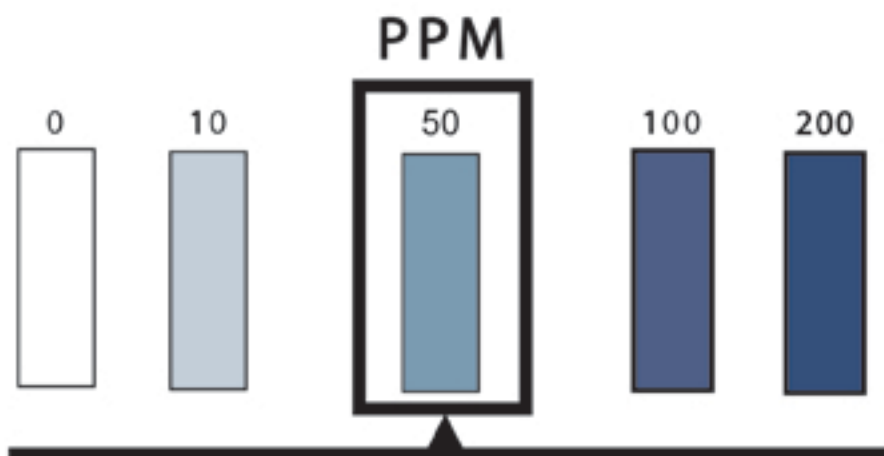

USE DRY FINGERS TO REMOVE TEST STRIP FROM CONTAINER!

1. DISHMACHINE

After sanitizing cycle (130°-160°F) hold test strip against wet ware. Immediately compare the test strip to the color chart. 50 PPM is the correct level.

2. GLASS WASHER

After completion of the sanitizing cycle, hold the test strip against the wet glass. Immediately compare the test strip to the color chart. 50 PPM is the correct level.

3. SINK OR CONTAINER

Dip test strip into solution to be tested. Immediately compare the test strip to the color chart. 50 PPM is the correct level.

KITCHEN & LAUNDRY DETERGENTS | EQUIPMENT SALES & SERVICE

1000 Linwood Street Brooklyn, New York 11208

Call 718-346-9111 | Fax 718-346-9133

www.CleanseTec.com

